

# **Xtreme Lowers**

311762C

### High volume lowers for protective coatings.

See page 3 for model information, see page 27 for maximum working pressure.




#### **Important Safety Instructions**


Read all warnings and instructions in this manual. Save these instructions.

#### Patents:

U.S. 6,925,926 U.S. 7,025,087 Taiwan 185733 Other patents pending

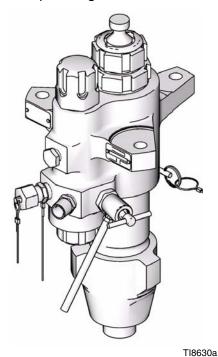

Model L220C2 Lower with Built-in Filter

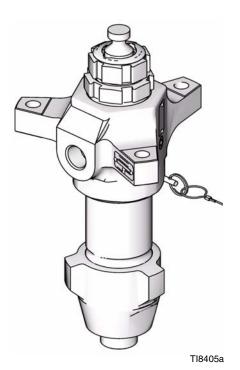

Model L220C1 Lower without Filter

PROVEN QUALITY. LEADING TECHNOLOGY.

# **Contents**

Related Manuals 2	Parts	14
Models 3		
Warnings 4	Dimensions	25
Component Identification 6		
Repair	Technical Data	27
Disassembly 7	Graco Standard Warranty	28
Service Built-in Filter	Graco Information	28

# **Related Manuals**

Component Manuals in U.S. English:

Manual	Description
311164	Xtreme Packages Instructions and Parts
311238	NXT Air Motor Instructions and Parts
311239	Air Control Modules for NXT Air Motors Instructions and Parts

The Xtreme Lowers manual is available in the following languages. See the following chart for specific languages and corresponding part numbers.


Manual	Language
311762	English
312451	Chinese
312452	Dutch
312453	Finnish
312454	French
312455	German
312456	Greek

Manual	Language
312457	Italian
312458	Japanese
312459	Korean
312460	Portuguese
312461	Russian
312462	Spanish
312463	Swedish
312464	Turkish

### **Models**

Check the identification plate (ID) on your lower for the 6-digit part number of your lower. Use the following matrix to define the construction of your lower, based on the six digits. For example, Lower Part Number **L180C1** represents the lower (**L**), output volume (**180**), carbon steel construction (**C**), and no filter with Xtreme Seal<sup>™</sup> packing stack (**1**).

To order replacement parts, see Parts, starting on page 14.

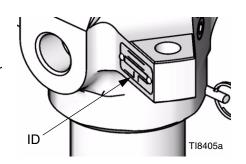



For maximum fluid working pressures, see **Technical Data** section starting on page 27.

L	180		С			1	
First	Second, Third, and Fourth Digits		Fifth Digit			Sixth Digit	
Digit	Lower Volume (cc)		Material		Integrated Filter	Xtreme Seal <sup>™</sup> Packings	Tuff Stack <sup>™</sup> Packings
	85★	С	Carbon Steel	1		V	
	115★			2	~	~	
	145			3			<b>✓</b>
	14A★			4	~		<b>✓</b>
	180						
<b>L</b> (lower)	18A <b>★</b>						
(lower)	220						
	22A <b>★</b>						
	250						
	290						
	29A★						

★ Models with a 5.9 in. bolt pattern; see page 26.

# Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbol refers to procedure-specific risk. Refer back to these warnings. Additional, product-specific warnings may be found throughout the body of this manual where applicable.

### **WARNING**



#### FIRE AND EXPLOSION HAZARD

Flammable fumes, such as solvent and paint fumes, in **work area** can ignite or explode. To help prevent fire and explosion:



- Use equipment only in well ventilated area.
- Eliminate all ignition sources; such as pilot lights, cigarettes, portable electric lamps, and plastic drop cloths (potential static arc).
- Keep work area free of debris, including solvent, rags and gasoline.
- Do not plug or unplug power cords, or turn power or light switches on or off when flammable fumes are present.
- Ground all equipment in the work area. See Grounding instructions.
- Use only grounded hoses.
- Hold gun firmly to side of grounded pail when triggering into pail.
- If there is static sparking or you feel a shock, **stop operation immediately.** Do not use equipment until you identify and correct the problem.
- Keep a working fire extinguisher in the work area.



#### **SKIN INJECTION HAZARD**

High-pressure fluid from gun, hose leaks, or ruptured components will pierce skin. This may look like just a cut, but it is a serious injury that can result in amputation. **Get immediate surgical treatment.** 



- Do not point gun at anyone or at any part of the body.
- Do not put your hand over the spray tip.
- Do not stop or deflect leaks with your hand, body, glove, or rag.
- Do not spray without tip guard and trigger guard installed.
- Engage trigger lock when not spraying.
- Follow Pressure Relief Procedure in manual 311164, when you stop spraying and before cleaning, checking, or servicing equipment.



#### **EQUIPMENT MISUSE HAZARD**

Misuse can cause death or serious injury.

- Do not operate the unit when fatigued or under the influence of drugs or alcohol.
- Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See **Technical Data** in all equipment manuals.
- Use fluids and solvents that are compatible with equipment wetted parts. See **Technical Data** in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request MSDS forms from distributor or retailer.
- Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only.
- Do not alter or modify equipment.
- Use equipment only for its intended purpose. Call your distributor for information.
- Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.
- Do not kink or over bend hoses or use hoses to pull equipment.
- Keep children and animals away from work area.
- Comply with all applicable safety regulations.

### **WARNING**



#### **MOVING PARTS HAZARD**

Moving parts can pinch or amputate fingers and other body parts.



- Keep clear of moving parts.
- Do not operate equipment with protective guards or covers removed.
- Pressurized equipment can start without warning. Before checking, moving, or servicing equipment, follow the **Pressure Relief Procedure** in manual 311164. Disconnect power or air supply.



#### **TOXIC FLUID OR FUMES HAZARD**

Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.

- Read MSDS's to know the specific hazards of the fluids you are using.
- Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.
- Always wear impervious gloves when spraying or cleaning equipment.




#### PERSONAL PROTECTIVE EQUIPMENT

You must wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect you from serious injury, including eye injury, inhalation of toxic fumes, burns, and hearing loss. This equipment includes but is not limited to:

- Protective eyewear
- Clothing and respirator as recommended by the fluid and solvent manufacturer
- Gloves
- Hearing protection

# **Component Identification**

(Shown with Built-in Filter)

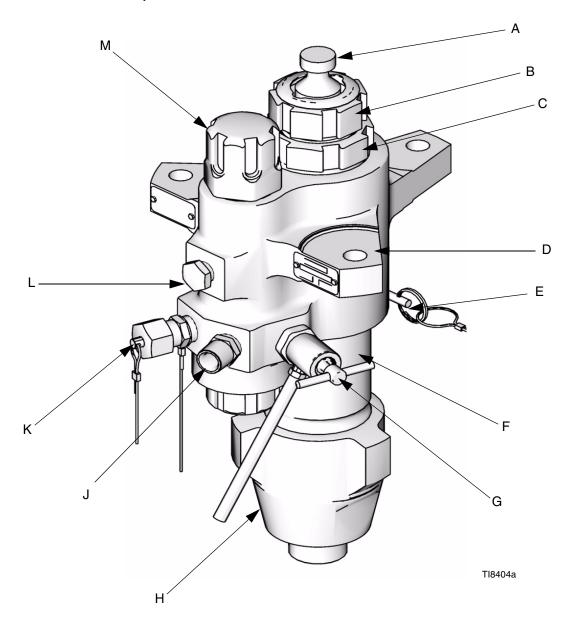

### Key:

- Displacement Rod
- В
- Packing Nut Throat Cartridge С
- D Outlet Housing
- Ε Locking Pin
- Cylinder

- Drain/Purge Valve
- Inlet Housing Н
- Fluid Outlet
- Optional Fluid Outlet (for second spray gun)
- L Pipe Plug
- Fluid Filter

# Repair

#### **Required Tools**

- Set of adjustable wrenches
- Torque wrench
- Rubber mallet
- Arbor press
- Soft wooden block (approx. 1 square ft in size)
- Large vise with soft jaws
- Thread lubricant
- Petroleum jelly
- Anti-seize lubricant 222955
- Loctite<sup>®</sup> 2760<sup>™</sup> or equivalent

### **Disassembly**


Layout all removed parts in sequence to ease reassembly. Clean all parts with a compatible solvent and inspect them for wear or damage.

Repair kits are available to replace the throat (T) and piston (P) packings, and to replace the o-rings and cylinder seals. For best results, use all new parts in the kit. Kit parts are marked with an asterisk, for example (25\*). These kits can also be used to convert the lower to different packing materials. See **Packing Kits**, page 22.



- 1. Relieve pressure. See your Xtreme Packages manual (311164) for instructions.
- Disconnect lower from motor as illustrated in your Xtreme Packages manual (311164). Or, if you have a cart mounted system, tip cart up to service lower on cart.


3. For lowers with built-in filters, loosen and remove both top filter cap (20) and bottom filter cap (26). See **Service Built-in Filter**, page 13.

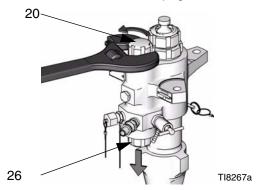


4. Loosen and remove inlet housing (14) from lower cylinder (11).




5. Remove shims (17), o-rings (25\*), inlet ball guide (15), inlet ball (16\*), and seat (18) from inlet housing (14). Inspect all parts for wear or damage.

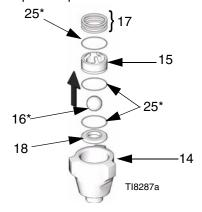


6. Stand lower upright in large vise. Using a rubber mallet, loosen, but do not remove packing nut (2).

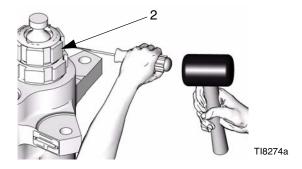


7. Remove locking pin (10) from lower cylinder (11).

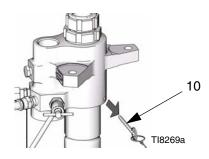

8. Unscrew and lift outlet housing (8) straight up off cylinder. Be careful not to scratch displacement rod (1).

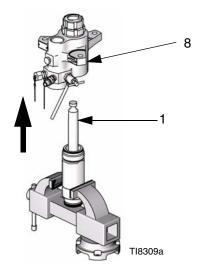


Remove cartridge assembly. Remove o-ring (27\*) from bottom of outlet housing (8), and then unscrew packing nut (2) from packing cartridge (7).
 Remove female gland (6\*), male gland (3\*), and v-packings (T) from packing cartridge (7).

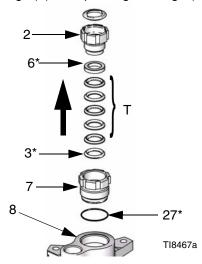


#### **CAUTION**

To reduce the possibility of costly damage to displacement rod (1) and lower cylinder (11), first place lower cylinder on a soft block of wood. Always use a rubber mallet or an arbor press to drive the displacement rod out of the lower cylinder. Never use a hammer to drive the rod out. Damage to the rod end will shorten pump life.


10. Stand lower cylinder (11) upright on a wooden block. Using a rubber mallet or an arbor press, drive displacement rod (1) and piston assembly (P) down in the cylinder as far as possible. Then place the cylinder on its side and continue to drive rod out of the bottom until the piston comes free. Pull the rod and piston from the cylinder, being careful not to scratch the rod or cylinder.

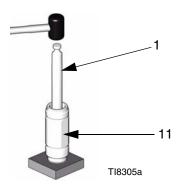


- 11. Inspect outer surface of displacement rod (1) and inner surface of lower cylinder (11) for scoring or wear; replace if damaged.
- 12. Put flats of piston valve (13) in a vise. Use a wrench to loosen displacement rod (1) from piston valve.

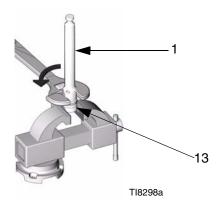

13. Remove displacement rod from piston valve. Be careful that piston ball (12\*) does not fall as you separate piston valve and rod.

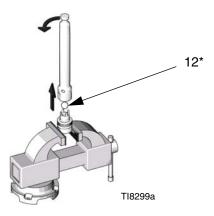


14. Remove glands and v-packings (P) from piston valve (13). Inspect piston ball (12\*) and piston valve for wear or damage.

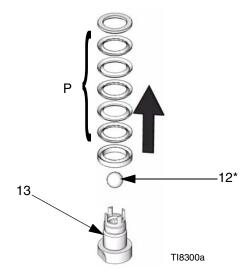

15. Clean all parts with a compatible solvent.

#### Reassembly


1. Replace female gland (3\*) on piston valve (13). Install the five v-packings (P) one at a time with lips facing up. Refer to **Packing Kits**, page 22 for the correct packing order for your lower. Install the male gland (6\*).

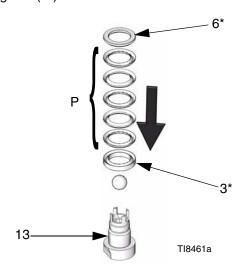


To convert the lower to a different packing material, see **Packing Kits**, page 22.

For best results, soak leather packings in oil before reassembly.

Apply anti-seize lubricant to threads and mating surfaces of displacement rod (1) and piston valve (13).
 Place flats of piston valve in a vise. Place piston ball (12\*) on piston valve.

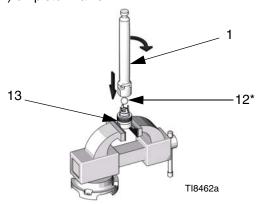


3. Screw displacement rod (1) onto piston valve (13), hand tight, and then torque to 190-210 ft-lb (258-285 N•m).

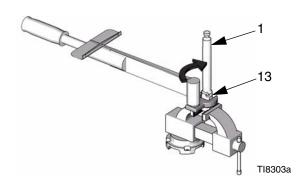

#### **CAUTION**


To reduce the possibility of costly damage to displacement rod (1) and lower cylinder (11), first place lower cylinder on a soft block of wood. Always use a rubber mallet or an arbor press to drive the displacement rod into the lower cylinder. Never use a hammer to drive the rod.

4. To reinstall displacement rod (1) into lower cylinder (11), first lubricate piston packings (P). Then, with piston end facing down, lower rod into cylinder. Start piston into cylinder as much as possible, then drive rod and piston the rest of the way into the cylinder with an arbor press or rubber mallet.

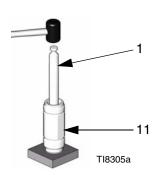


- 5. Lubricate inside of packing cartridge (7), outside threads of packing nut (2), and throat packings (T). Install packing cartridge into housing. Place male gland (3\*) in packing cartridge. Install the five v-packings one at a time with lips facing down. Refer to Packing Kits (page 22) for the correct packing order for your lower. Install female gland (6\*). Then, reassemble packing nut (2), but do not tighten.
- To convert lower to a different packing material, see Packing Kits, page 22.

For best results, soak leather packings in oil before reassembly.

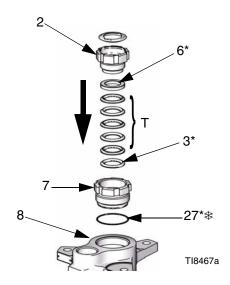



\*Blue o-ring for 220cc, 250cc, 290cc lowers.

Screw lower cylinder (11) onto outlet housing (8)
until it bottoms out. Use a wrench to tighten lower
cylinder. Back off as little as possible until hole in
housing lines up with flat on cylinder. Insert locking
pin (10) into cylinder.

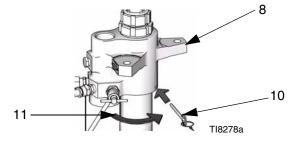


- 7. Lubricate o-rings (25\*) and reinstall. Install inlet seat (18), inlet ball (16\*), inlet ball guide (15), and shims (17) into inlet housing.
  - Shims can be assembled either for short ball travel or long ball travel. See illustrations below for example of each.

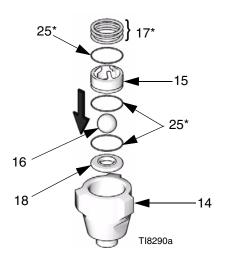

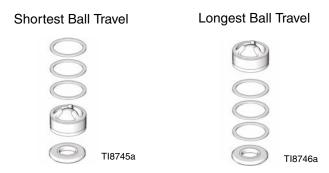


8. Thread inlet housing (14) onto lower cylinder (11). Torque to 140-150 ft-lb (189-203 N•m).

9. Using torque wrench, torque packing cartridge to outlet housing. Torque to 25-30 ft-lb (34-41 N•m).

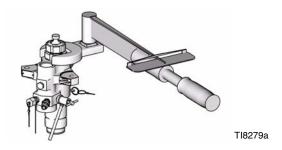

10. For lowers with built-in filter, see **Service Built-in Filter**, page 13, if filter needs service. Then reinstall both top filter cap (20) and bottom filter cap (26).

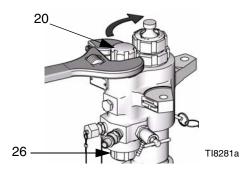

11. Reconnect lower to air motor. See Xtreme Packages manual (311164).

### **Service Built-in Filter**

Select models have a built-in filter in the lower housing.


### **Disassembly**

To remove and clean the built-in filter:


1. Use wrench to loosen and remove top filter cap (20).



2. Remove o-ring (22\*), strainer (23), and filter support (24).

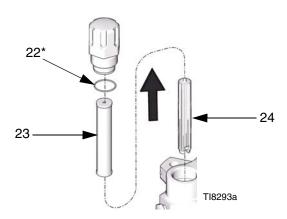


3. Use wrench to loosen and remove bottom filter cap (26). Remove o-rings (22\*, 28\*).

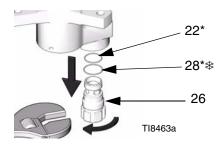

\*Blue o-ring


4. Inspect o-rings (22\*, 28\*), strainer (23), and filter support (24). Replace if necessary.

5. Remove pipe plug (49), and use brush or drill to clean port as necessary.

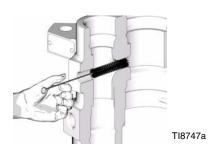


### Reassembly

To reassemble the built-in filter:

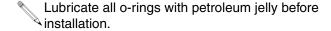


1. Install o-rings (22\*, 28\*) onto bottom filter cap (26). Then use wrench to reassemble and tighten bottom filter cap. Torque to 40-60 ft-lb (52-82 N•m).

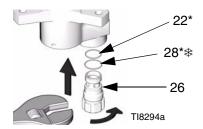


\*Blue o-ring

2. Reassemble o-ring (22\*) onto top filter cap (20). Install strainer (23), and filter support (24) in top filter cap. Then use wrench to install and tighten top filter cap. Torque to 40-60 ft-lb (52-82 N•m).

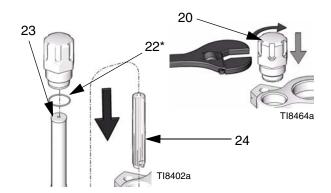

# **Parts**

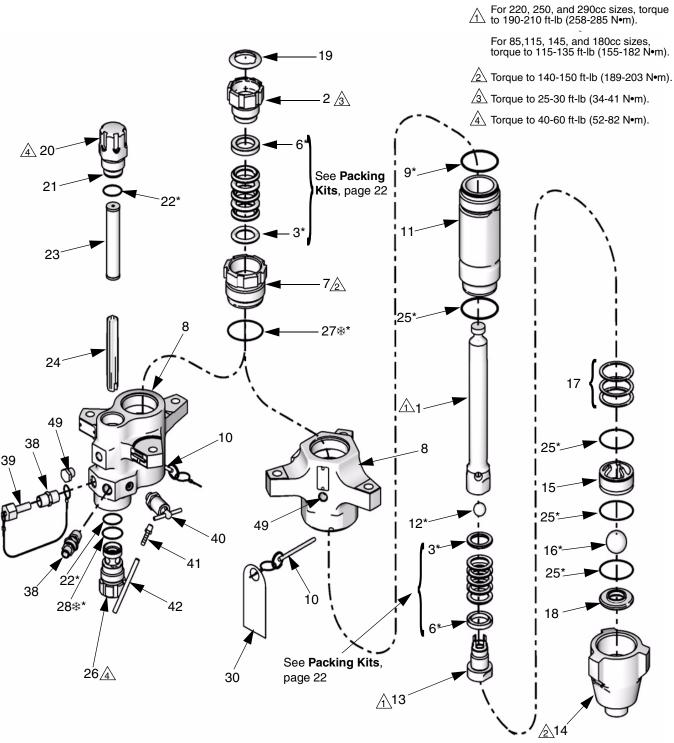

<sup>\*</sup> Parts included in packing kits (purchase separately). See Packing Kits, page 22.

\$ 27 is a blue o-ring for 220cc, 250cc, and 290cc lowers only. 28 is a blue o-ring.

TI8403a

Mode	ls L085C	1, L085C2, L085C3, L085C4		Ref.	Part	Description	Qty.
Ref.	Part	Description	Qty.	23†	236496	STRAINER, 60 mesh screen Pack of 2	
1		ROD, displacement	1	0.41		Pack of 25	
2		NUT, packing	1	24† 25*	188420 244896	SUPPORT, filter O-RING, PTFE, bottom cylinder	1
3*	<b>★</b> 288070	GLAND, male (pack of 4)		23	244030	(pack of 10)	
4*✿		9V-PACKING, PTFE (pack of 10)		26†	197339	CAP, filter, bottom	1
	<b>*</b> 288082	2		27*		O-RING, PTFE (pack of 10)	
5*🍁		3 V-PACKING, leather (pack of 10)		28*†	244896		
6*	<b>*</b> 28808	I 9GLAND, female (pack of 4)		20 ▲	172470	(pack of 10) TAG, warning	1
O	<b>*</b> 28807					7 V-PACKING, UHMWPE	ı
7		CARTRIDGE, packing	1			(pack of 10)	
8		HOUSING, outlet			<b>*</b> 288080	O Ü	
		Standard; models L085C1, L085C3		38†		FITTING, nipple	2
	135039	With built-in filter; models L085C2, L085C4	'	39† 40†		PLUG, packless, 0.5 in. VALVE, pressure, dump	1
9*	288067	O-RING, top cylinder, PTFE		41†		FITTING, barbed, plated	1
		(pack of 10)		42†		TUBE, nylon	1
10		PIN, self-locking	1	49	101751	PLUG, pipe	
11 12*		CYLINDER, lower	1		101754	Models L085C1, L085C3 Models L085C2, L085C4	1
12	200000	BALL, piston; 9/16 in. (14.3 mm) diameter (pack of 3)			190292	Wodels 200502, 200504	'
13	15F669	VALVE, piston	1	▲ R	eplaceme	ent Danger and Warning labels, tags,	and
14	15F667	HOUSING, inlet	1	ca	rds are av	/ailable at no cost.	
15 16*	15F664 244899	GUIDE, ball, inlet BALL, inlet; 1.0 in. (25.4 mm) diam	1 -	† Fo	or models	L085C2 and L085C4 only.	
10	244000	eter		✓ Th	roat pack	ings.	
47	000004	(pack of 3)			iston pack		
17 18		SHIM, inlet, ball guide (pack of 9) SEAT, inlet	1		•	ango.	
19		PLUG, throat seal (pack of 10)		<b>☆</b> No	ot shown.		
20†	15F859	CAP, filter, top	1			led in packing kit (purchase separate	∍ly).
21†		SPRING, compression	1	Se	ee Packing	<b>y Kits</b> , page 22.	
22*†	244895	O-RING, PTFE, filter (pack of 10)					

Mode	els L115C	1, L115C2, L115C3, L115C4		Ref.	Part	Description	Qty.
Ref. 1 2 3* 4*  5*  \$\delta\$	288074 288066	Description  ROD, displacement  NUT, packing  GLAND, packing, male (pack of 4)  V-PACKING, PTFE (pack of 10)  Models L115C3, L115C4;  V-PACKING, leather (pack of 10)  Models L115C1, L115C2	<b>Qty.</b> 1 1	22*† 23† 24† 25* 26† 27* 28*	188420 244896 197339	STRAINER, 60 mesh screen Pack of 2 Pack of 25 SUPPORT, filter O-RING, PTFE (pack of 10) CAP, filter, bottom O-RING; PTFE (pack of 10)	1
6* 7 8	15F661 15F654	GLAND, female (pack of 4) CARTRIDGE, packing HOUSING, outlet Standard; models L115C1, L115C3 With built-in filter; models L115C2, L115C4	1 3 1 1	30▲ 35* <b>☆</b> 38† 39†	288075 158491	(pack of 10) TAG, warning V-PACKING, UHMWPE, (pack of 10), Models L115C1, L115C2 FITTING, nipple PLUG, packless, 0.5 in.	1 2 1
9* 10 11			1 1	40† 41† 42† 49	245143	VALVE, pressure, dump FITTING, barbed, plated	1 1 1
12* 13 14	288065 15F657 15F667	BALL, piston; 9/16 in. (14 mm) diameter (pack of 3) VALVE, piston HOUSING, inlet	1 1		•	· · · · · · · · · · · · · · · · · · ·	1 1 , and
15 16* 17 18 19 20†	247393 15F859	BALL, inlet; 1 in. (25 mm) diameter (pack of 3) SHIM, inlet, ball guide (pack of 9) SEAT, 1 in. ball PLUG, throat seal (pack of 10) CAP, filter, top	1 1	† Fa	or models ot shown. arts includ	L115C2 and L115C4 only.  led in packing kit (purchase separate  Kits, page 22.	əly).
21†	171941	SPRING, compression	1				

Models L145C1, L145C2, L145C3, L145C4, L14AC			C1,	Ref.	Part	Description	Qty.
1 15		<b>Description</b> ROD, displacement NUT, packing	<b>Qty.</b> 1 1	23†		STRAINER, 60 mesh screen Pack of 2 Pack of 25 SUPPORT, filter	1
3* 24 4* <b>☆</b> 24	44881 44857	GLAND, male (pack of 4) V-PACKING, PTFE (pack of 10) V-PACKING, leather (pack of 10)	•	25 <sup>*</sup> 26†	244890 197339	(pack of 10)	1
6* 24	44875	GLAND, female (pack of 4) CARTRIDGE, packing	1	27* 28*†		O-RING; PTFE (pack of 10)	
8 19	97334	HOUSING, outlet Standard; models L145C1, L145C3 With built-in filter;	•		172479 244863	TAG, warning V-PACKING, UHMWPE (pack of 10)	1
15	5J673	models L145C2, L145C4 Standard; model L14AC1	1	38† 39† 40†	244517	FITTING, nipple PLUG, packless, 0.5 in. VALVE, pressure, dump	2
10 24	44826	O-RING, PTFE, top cylinder (pack of 10) PIN, self-locking	1	41† 42†	116746	FITTING, barbed, plated TUBE, nylon	1
		CYLINDER, lower BALL, piston; 9/16 in. (14 mm) diameter (pack of 3)	1	49	101754 198292	PLUG, pipe Models L145C1, L145C3 Models L145C2, L145C4	1
14 19 15 19	97303 97307	VALVE, piston HOUSING, inlet GUIDE, ball, inlet	1 1 1		•	ent Danger and Warning labels, tags, vailable at no cost.	and
	53031	BALL, inlet; 1.25 in. diameter (pack of 3) SHIM, inlet, ball guide (pack of 9)			or models ot shown.	L145C2 and L145C4 only.	
18 19 19 24 20† 19 21† 17	96358 47394 97338	SEAT, 1 in. ball PLUG, throat seal (pack of 10) CAP, filter, top SPRING, compression	1 1 1	* Pa	arts includ	led in packing kit (purchase separate g Kits, page 22.	ly).

Models L180C1, L180C2, L180C3, L180C4, L18AC			C1	Ref.	Part		Qty.
Ref.	Part	<b>Description</b> ROD, displacement	Qty.	23†	224459	STRAINER, mesh, screen, 60 Pack of 2 Pack of 25	
2 3*	15K030 244882	NUT, packing GLAND, male (pack of 4)	1	24† 25*	186075 244890	SUPPORT, filter O-RING, PTFE, bottom cylinder	1
4* <b>☆</b> 5* <b>☆</b> 6*	244870	V-PACKING, PTFE (pack of 10) V-PACKING, leather (pack of 10) GLAND, female		26† 27* 28*†	197339 244890 244896	(pack of 10) CAP, filter, bottom O-RING, PTFE (pack of 10) O-RING, PTFE filter bottom, blue	1
7 8	197334	(pack of 4) CARTRIDGE, packing HOUSING, outlet Standard; models L180C1, L180C3		30▲		(pack of 10) TAG, warning V-PACKING, UHMWPE	1
		With built-in filter; models L180C2, L180C4 Standard; model L18AC1	1	38† 39†		PLUG, packless, 0.5 in.	2 1
9*		O-RING, PTFE, top cylinder (pack of 10)	4	40† 41† 42†	116746	VALVE, pressure, dump FITTING, barbed, plated TUBE, nylon	1
10 11 12*	197316	PIN, self-locking CYLINDER, lower BALL, piston; 9/16 in. (14 mm)	1	42 I 49	101754	PLUG, pipe	1
13	197310	diameter (pack of 3) VALVE, piston	1	. 5	198292	ŕ	1
14 15 16*	197307	HOUSING, inlet GUIDE, ball, inlet BALL, inlet; 1.25 in.diameter	1 1	ca	rds are a	ent Danger and Warning labels, tags, a vailable at no cost.	ana
17		(pack of 3) SHIM, inlet, ball guide (pack of 3)		•	or models ot shown.	L180C2 and L180C4 only.	
18 19 20† 21† 22*†	196358 247394 197338 171941	SEAT, inlet PLUG, throat seal (pack of 10) CAP, filter, top SPRING, compression O-RING, PTFE, filter (pack of 10)	1 1 1	* Pa	arts includ	led in packing kit (purchase separatel g Kits, page 22.	'y).

Models L220C1, L220C2, L220C3, L220C4, L22AC1			C1	Ref.	Part	Description	Qty.
Ref.	Part	Description	Qty.	23†	224459	STRAINER, 60 mesh screen Pack of 2	
1		ROD, displacement	1			Pack of 25	
2		NUT, packing	i	24†		SUPPORT, filter	1
_ 3*		3 GLAND, male (pack of 4)	•	25*	244894	O-RING, PTFE, bottom cylinder	
Ū	<b>*</b> 24488					(pack of 10)	
4*✿		9V-PACKING, PTFE (pack of 10)		26†	197339	CAP, filter, bottom	1
	<b>*</b> 24486			27*	244891	O-RING, PTFE (pack of 10)	
5*🏗	<b>√</b> 24487	1 V-PACKING, leather (pack of 10)		28*†	244896	O-RING, PFTE, filter bottom, blue	
	<b>×</b> 24487					(pack of 10)	
6*	<b>√</b> 24487	7 GLAND, female (pack of 4)		30▲	172479	TAG, warning	1
	<b>×</b> 244878			35*✿	<b>√</b> 24486	5 V-PACKING, UHMWPE	
7	197327	CARTRIDGE, packing	1			(pack of 10)	
8		HOUSING, outlet			<b>*</b> 24486		
		Standard; models L220C1, L220C3		38†		FITTING, nipple	2
	197337	With built-in filter; models L220C2,	1	39†		PLUG, packless, 0.5 in.	1
		L220C4		40†		VALVE, pressure, dump	1
	15H722	Standard, 5.9 in. bolt pattern;	1	41†		FITTING, barbed, plated	1
		model L22AC1 only		42†	116750	TUBE, nylon	1
9*	244893	O-RING, top cylinder, PTFE		49		PLUG, pipe	
		(pack of 10)				Models L220C1, L220C3	1
10		PIN, self-locking	1		198292	Models L220C2, L220C4	1
11		CYLINDER, lower	1			of Decree and Manager Laborate trans-	
12*	244898	BALL, piston; 7/8 in. (22 mm) diam	-			ent Danger and Warning labels, tags,	ana
		eter (pack of 3)		ca	rds are av	vailable at no cost.	
13		VALVE, piston	1	t Fo	or models	L220C2 and L220C4 only.	
14		HOUSING, inlet	1			•	
15		GUIDE, ball, inlet	1	✓ Th	roat pack	rings.	
16*	253030	BALL, inlet; 1.5 in. diameter (pack of 3)		<b>*</b> P	iston pack	kings.	
17	244856	SHIM, inlet, ball guide (pack of 9)			•		
18		SEAT, inlet	1	SP NO	ot shown.		
19		PLUG, throat seal (pack of 10)	•	* Pa	arts includ	led in packing kit (purchase separate	lv).
20†		CAP, filter, top	1			g <b>Kits</b> , page 22.	27
21†		SPRING, compression	1			, , <sub> </sub> g • <b></b> -	
22 <sup>*</sup> †		O-RING, PTFE, filter (pack of 10)					

Mode	els L250C	1, L250C2, L250C3, L250C4		Ref.	Part	Description	Qty.
Ref.	Part	Description	Qty.	22*† 23†	244895	STRAINER, 60 mesh screen	
1	15J096	ROD, displacement	1		224459		
2	15K031	NUT, packing	1	041		Pack of 25	
3*		GLAND, male (pack of 4)		24†	186075		1
<b>4</b> * <b>☆</b>		V-PACKING, PTFE (pack of 10)		25*	244894	, ,	
5*✿	245230	V-PACKING, leather (pack of 10)		001	407000	(pack of 10)	
6*	0.45000	GLAND, female (pack of 4)		26†	197339		1
		MODELS, L250C1, L250C2		27*		O-RING, PTFE (pack of 10)	
_		MODELS L250C3, L250C4	_	28*†	244896	O-RING, PTFE, filter, bottom, blue	
7	197328	CARTRIDGE, packing	1	00 4	170470	(pack of 10)	4
8	107005	HOUSING, outlet	. 1	30▲	172479 245231	, 3	1
		Standard; models L250C1, L250C3		33 <b>W</b>	243231	V-PACKING, UHMWPE	
	197337	With built-in filter; models L250C2, L250C4	I	20+	150401	(pack of 10)	0
	154700		1	38†		FITTING, nipple PLUG, packless, 0.5 in.	2 1
	1301/22	Standard, 5.9 in. bolt pattern;	I	39† 40†		VALVE, pressure, dump	1
9*	244902	model L29AC1 only O-RING, PTFE, top cylinder		40† 41†		FITTING, barbed, plated	1
9	244093			42†		TUBE, nylon	1
10	044006	(pack of 10) PIN, self-locking	4	49	110750	PLUG, pipe	•
10		CYLINDER, lower	1 1	40	101754		1
11 12*		BALL, piston; 7/8 in. (22 mm)	I		198292		i
12	244030	diameter (pack of 3)			.00202		•
13	107212	VALVE, piston	1	▲ B	enlaceme	ent Danger and Warning labels, tags,	and
14		HOUSING, inlet	1		•	vailable at no cost.	ana
15		GUIDE, ball, inlet	1	U.	irus arc ar	ranable at no cost.	
16*		BALL, inlet; 1.5 in.diameter		† Fo	or models	L250C2 and L250C4 only.	
10	230000	(pack of 3)		A/.	ot shown.		
17	244856	SHIM, inlet, ball guide (pack of 9)		<b>38</b> /V	JI SHOWII.		
18	197344	SEAT, inlet	1	* Pá	arts includ	ed in packing kit (purchase separate	ŀly).
19		PLUG, throat seal (pack of 10)	•			Kits, page 22.	- /
20†		CAP, filter, top	1		_		
21†	171941		i				
		= 3.,	=				

Models L290C1, L290C2, L290C3, L290C4, L29AC			C1	Ref.	Part	Description	Qty.
Ref.	Part	Description	Qty.	23†	224459		
1 2 3* 4* <b>☆</b>	15K031 ✓24488 <b>*</b> 24488	ROD, displacement NUT, packing 5 GLAND, male (pack of 4) 6 1 V-PACKING, PTFE (pack of 10)	1	24† 25* 26†	186075 244894	Pack of 25 SUPPORT, filter O-RING, PTFE, bottom cylinder (pack of 10) CAP, filter, bottom	1
5*✿	<b>×</b> 24486	2 3 V-PACKING, leather (pack of 10)		27 <sup>*</sup> 28*†	244891 244896		
6* 7	<b>×</b> 24488	9GLAND, female (pack of 4) 0 CARTRIDGE, packing	1	30▲ 35* <b>☆</b>		TAG, warning 7 V-PACKING, UHMWPE (pack of 10)	1
8	197335 197337	HOUSING, outlet Standard, models L290C1, L290C3 With built-in filter; models L290C2, L290C4 Standard, 5.9 in. bolt pattern,	3 1 1	38† 39† 40† 41†	244517 245143		2 1 1 1
9*	244893	model L29AC1 only O-RING, PTFE, top cylinder (pack of 10)		42† 49	116750 101754	TUBE, nylon PLUG, pipe Models L290C1, L290C3 Models L290C2, L290C4	1 1 1
10 11 12*	197319	PIN, self-locking CYLINDER, lower BALL, piston; 7/8 in. (22 mm) diameter (pack of 3)	1 1 -		eplaceme	ent Danger and Warning labels, tags, vailable at no cost.	-
13 14 15	197304	VALVE, piston HOUSING, inlet GUIDE, ball, inlet	1 1 1	-		L290C2 and L290C4 only.	
16*		BALL, inlet; 1.5 in. diameter (pack of 3)	•		iroat pack ston pack		
17 18 19 20† 21† 22*†	197344 247395 197338 171941	SHIM, inlet, ball guide (pack of 9) SEAT, inlet PLUG, throat seal (pack of 10) CAP, filter, top SPRING, compression O-RING, PTFE, filter (pack of 10)	1 1 1	* Pa		led in packing kit (purchase separate <b>g Kits</b> , page 22.	ely).

### **Packing Kits**

### Xtreme Seal<sup>™</sup> Repair Kits

Kit 288058 for 115 cc Lowers Kit 244850 for 145 cc (600) Lowers Kit 244851 for 180 cc (750) Lowers Kit 244853 for 250 cc (1045) Lowers

Ref.	Description
3	GLAND, packing, male
5	V-PACKING, leather
6	GLAND, packing, female
35	V-PACKING, UHMWPE

Kit also includes items 9, 12, 16, 22, 25, 27, 28 (see **Parts**, starting on page 14).

Lips Face Down	Lips Face Up
6	3-
35	5 35

**Lubricate Packings** 


TI8634a

### Tuff Stack<sup>™</sup> Repair Kits

Kit 288060 for 115 cc Lowers Kit 244900 for 145 cc (600) Lowers Kit 244901 for 180 cc (750) Lowers Kit 244903 for 250 cc (1045) Lowers

Ref.	Description
3	GLAND, packing, male
4	V-PACKING, PTFE
6	GLAND, packing, female

Kit also includes items 9, 12, 16, 22, 25, 27, 28 (see **Parts**, starting on page 14).

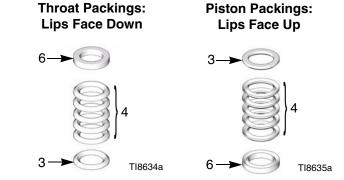

**Lubricate Packings** 

**Piston Packings:** 

### Xtreme Seal<sup>™</sup> Repair Kits

Kit 288054 for 85 cc Lowers Kit 244852 for 220 cc (900) Lowers Kit 244854 for 290 cc (1200) Lowers

Ref.	Description
3*	GLAND, packing, male
3**	GLAND, packing, male
5*	V-PACKING, leather
5**	V-PACKING, leather
6*	GLAND, packing, female
6**	GLAND, packing, female
35*	V-PACKING, UHMWPE
35**	V-PACKING, UHMWPE

Kit also includes items 9, 12, 16, 22, 25, 27, 28 (see **Parts**, starting on page 14).

Throat Packings:

	Lips Face Down	Lips Face Up
Qty.		
1	6* <del>→</del>	3**
2		
2	5* 35*	5**
1	000	
3		
3	3* <b>→</b> TI8634a	6** <b>→</b> TI8635a

**Lubricate Packings** 

22 311762C

Qty.

10 2

# Tuff Stack<sup>™</sup> Repair Kits

Kit 288056 for 85 cc Lowers Kit 244902 for 220 cc (900) Lowers Kit 244904 for 290 cc (1200) Lowers

Ref.	Description	Qty.
3*	GLAND, packing, male	1
3**	GLAND, packing, male	1
4*	V-PACKING, PTFE	5
4**	V-PACKING, PTFE	5
6*	GLAND, packing, female	1
6**	GLAND, packing, female	1


Kit also includes items 9, 12, 16, 22, 25, 27, 28 (see **Parts**, starting on page 14).

Throat Packings: Lips Face Down	Piston Packings: Lips Face Up		
<b>6*→○</b> )	3**		
4*	4**		
3 <b>*→</b> TI8634a	6* <del>*</del> ► TI8635a		

**Lubricate Packings** 

### Fluid Drain Valve Repair Kit 245145

Ref.	Description	Qty.
1	BALL, carbide	1
2	RING, retaining	1
3	O-RING, PTFE	2
4	SEAT, valve	1
5	GASKET	1

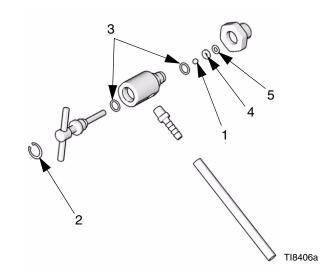


### Strainers (Ref. 23)

	2 Pack				
Lower Size	30 mesh	60 mesh	100 mesh		
85cc					
115cc	236495	236496	236497		
145cc					
180cc					
220cc	244458	224459	224468		
250cc					
290сс					

25 Pack					
30 mesh 60 mesh 100 mes					
238444	238446	238448			
238436	238438	238440			

# **Dimensions**

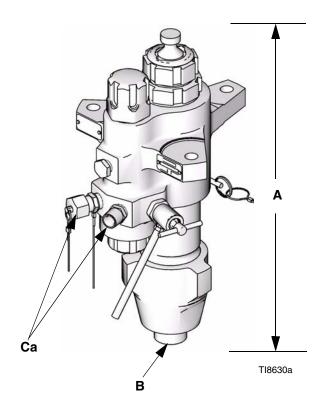

Cb T18405a

**Lowers with Built-in Filters** 


**Lowers without Built-in Filters** 

### **Lower Dimensions**

	A (Height)	B (Inlet)	Ca (Outlet)	Cb (Outlet)		<b>ight</b> (kg)
Lower	in. (mm)	in. npt(m)	in. npt(m)	in. npt(f)	Without Filter	With Filter
85cc	17.0 (432)	1-1/4	2x1/2	1/2	28 (12.7)	36 (16.3)
115cc	17.0 (432)	1-1/4	2x1/2	1/2	28 (12.7)	36 (16.3)
145cc	17.0 (432)	1-1/4	2x1/2	3/4	38 (17.3)	48 (21.8)
14Acc	17.0 (432)	1-1/4	2x1/2	3/4	38 (17.3)	48 (21.8)
180cc	17.0 (432)	1-1/4	2x1/2	3/4	38 (17.3)	48 (21.8)
18Acc	17.0 (432)	1-1/4	2x1/2	3/4	38 (17.3)	48 (21.8)
220cc	17.0 (432)	1-1/4	2x1/2	1	42 (19.1)	52 (23.6)
22Acc	17.0 (432)	1-1/4	2x1/2	1	42 (19.1)	52 (23.6)
250cc	17.0 (432)	1-1/4	2x1/2	1	42 (19.1)	52 (23.6)
290cc	17.0 (432)	1-1/4	2x1/2	1	43 (19.5)	53 (24.1)
29Acc	17.0 (432)	1-1/4	2x1/2	1	43 (19.5)	53 (24.1)


# **Outlet Housing Mounting Hole Layout**

**5.9 in. (150 mm) Outlet Housing (example) Shown** Applies to 85, 115, 14A, 18A, 22A, and 29Acc Lowers

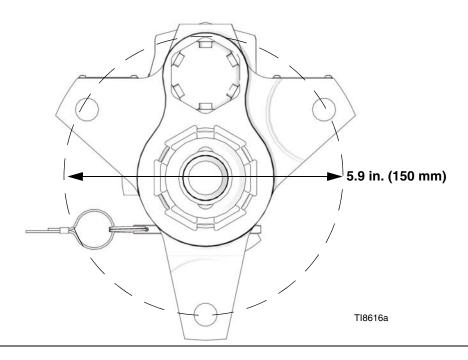

# 8.0 in. (203 mm) Outlet Housing (example) Shown

Applies to 145, 180, 220, 250, and 290cc Lowers

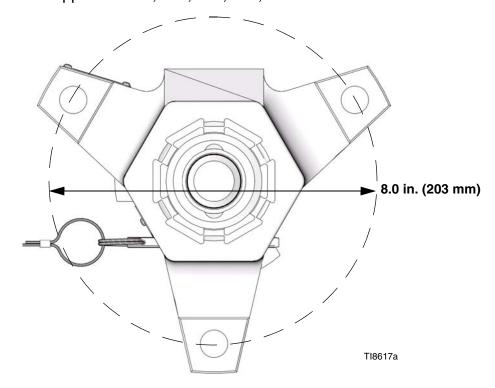

# **Technical Data**

All lower models have the same maximum operating temperature and wetted parts.

of Stainless Steel; Zinc and Nickel Plating; Ductile Iron;

Tungsten Carbide; PTFE; Leather

Lower	Max. Fluid Working Pressure	Displacement per Cycle
85cc	7250 psi (50 MPa, 500 bar)	85cc
115cc	7250 psi (50 MPa, 500 bar)	115cc
145cc	7400 psi (51 MPa, 511 bar)	145cc
180cc	7400 psi (51 MPa, 511 bar)	180cc
220cc	6000 psi (41.4 MPa, 414 bar)	220cc
250cc	5600 psi (38.6 MPa, 386 bar)	250cc
290cc	5600 psi (38.6 MPa, 386 bar)	290сс

# **Graco Standard Warranty**

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

#### FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

### **Graco Information**

TO PLACE AN ORDER, contact your Graco distributor or call to identify the nearest distributor.

Phone: 612-623-6921 or Toll Free: 1-800-328-0211 Fax: 612-378-3505

All written and visual data contained in this document reflects the latest product information available at the time of publication.

Graco reserves the right to make changes at any time without notice.

MM 311762C

Graco Headquarters: Minneapolis International Offices: Belgium, China, Japan, Korea

**GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441**